

V8BFW.. 蝶阀 Butterfly Valve

安装说明 INSTALLATION INSTRUCTIONS

安装 Installation

- 对齐管路，并确保全开阀门时，阀体与法兰面无实际的表面接触(图1)；
Align the piping, make sure valve disc does not contact the flange surfaces(Figure 1).
- 将阀置于法兰间并且居中；
Place the valve between the flanges and center the valve.
- 螺栓穿入盘，用手预紧螺；
Install all of the flange bolts.

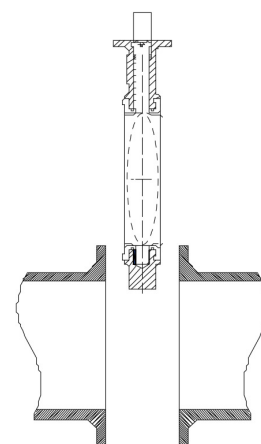


图1 Figure1

- 依照图2的顺序依次锁紧螺栓；
Tighten the flange bolts according to the sequence in Figure 2.

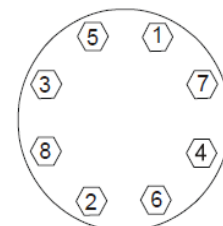


图2 Figure2

- 全开全关阀门，确保安装无误(图3)。
Fully close and open the valve according to Figure 3, make sure the valve is proper installed.


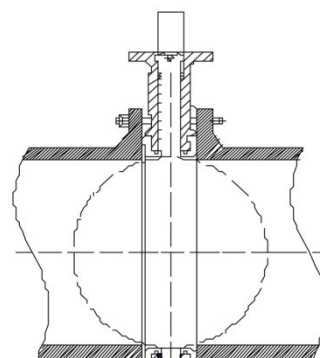


图3 Figure3

尺寸图 Dimensions

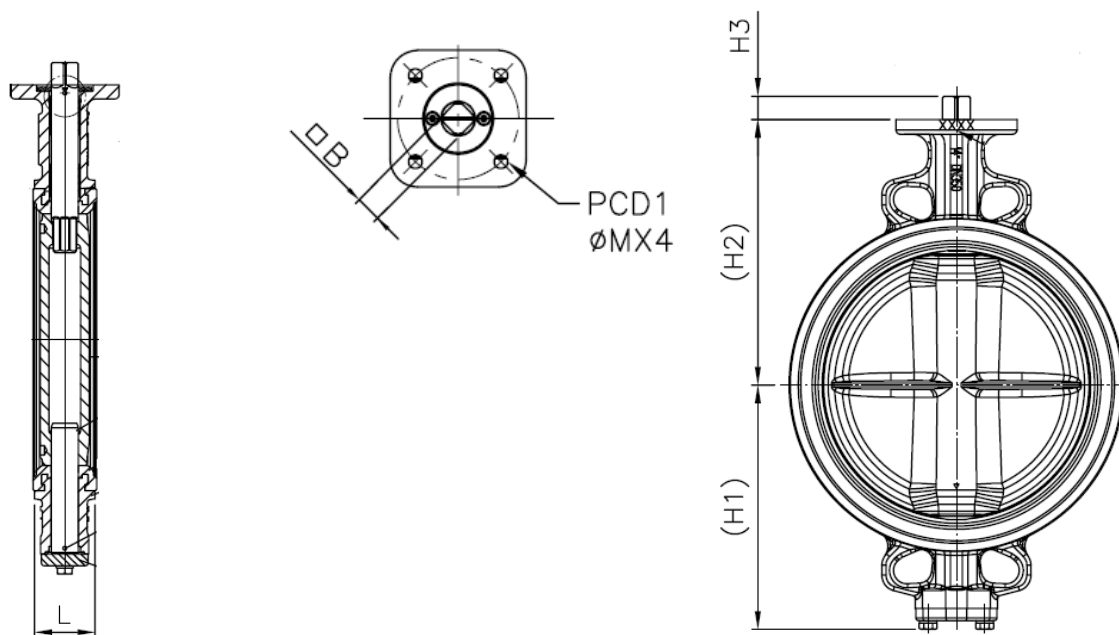

单位 Unit: mm

型号 Model	口径 SIZE	L	□B	H1	H2	H3	重量 Weight (kg)
V8BFW16-050..	DN50	43	11	65	143	19	3
V8BFW16-065..	DN65	46	11	71	155	19	3.8
V8BFW16-080..	DN80	46	11	77	162	19	4
V8BFW16-100..	DN100	52	11	107	181	19	5.3
V8BFW16-125..	DN125	56	14	122	197	19	7.3
V8BFW16-150..	DN150	56	14	150	210	19	8.2
V8BFW16-200..	DN200	60	17	165	240	24	13.5
V8BFW16-250..	DN250	68	19	201	286	24	21.2
V8BFW16-300..	DN300	78	22	234	309	24	32.5
V8BFW16-350..	DN350	78	27	303	329	29	48
V8BFW16-400..	DN400	102	27	335	361	29	60
V8BFW16-450..	DN450	114	36	363	393	38	80
V8BFW16-500..	DN500	127	36	397	427	38	125
V8BFW16-600..	DN600	154	36	459	492	48	200