


NOM25..


蝶阀电动执行器 Butterfly Valve Actuator

安装说明 INSTALLATION INSTRUCTIONS


■ 手动操作 Manual Operation

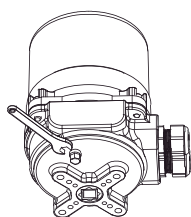


NOM25A050..80(P)系列
NOM25A050..80(P)Series

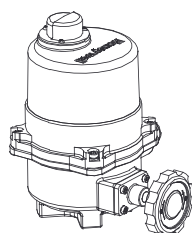


NOM25A100(P)系列
NOM25A100(P)Series

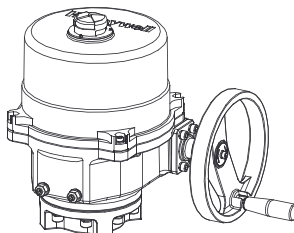

NOM25A125..400(P)系列
NOM25A125..400(P)Series

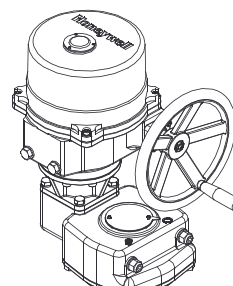

NOM25A450..600(P)系列
NOM25A450..600(P) Series

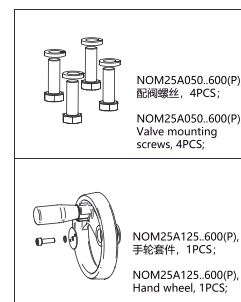



附件
Attachments

A1: 管道安装 Installation




在现场管路压力测试及管路冲洗时，阀门应处于全开状态。
Please keep the valve at fully open position in pressure testing or pipeline flushing mode.


A1

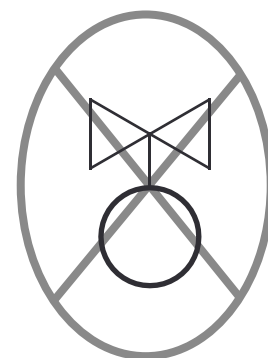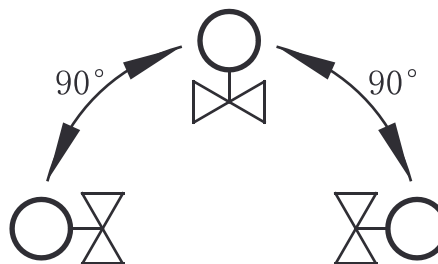


B1-B5: 连接阀门 Connect to Valve

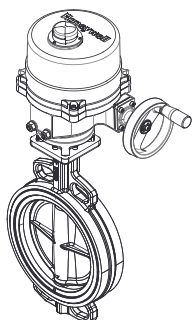


B1

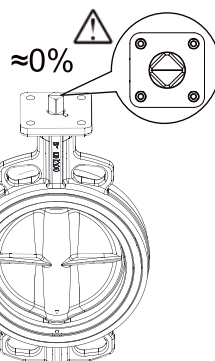


B2

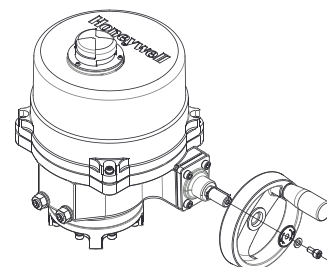


B3

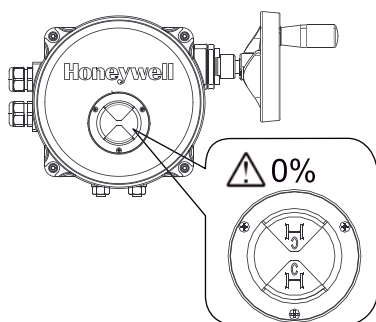

B4

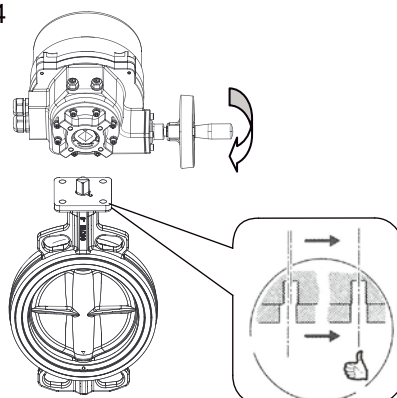

B5

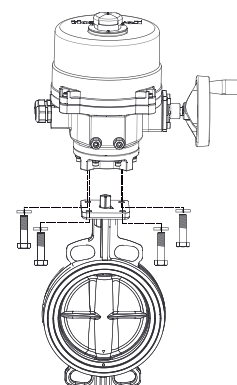

■ 执行器与阀门型号匹配 Model matching of actuator and butterfly valve

开关型执行器与蝶阀型号匹配表

Matching table of On-off type actuator and butterfly valve


口径 DN size	阀门 Valve	执行器 Actuator
DN50	V8BFW25-050	NOM25A050
DN65	V8BFW25-065	NOM25A065
DN80	V8BFW25-080	NOM25A080
DN100	V8BFW25-100	NOM25A100
DN125	V8BFW25-125	NOM25A125
DN150	V8BFW25-150	NOM25A150
DN200	V8BFW25-200	NOM25A200
DN250	V8BFW25-250	NOM25A250
DN300	V8BFW25-300	NOM25A300
DN350	V8BFW25-350	NOM25A350
DN400	V8BFW25-400	NOM25A400
DN450	V8BFW25-450	NOM25A450
DN500	V8BFW25-500	NOM25A500
DN600	V8BFW25-600	NOM25A600

调节型执行器与蝶阀型号匹配表


Matching table of modulating type actuator and butterfly valve

口径 DN size	阀门 Valve	执行器 Actuator
DN50	V8BFW25-050	NOM25A050P
DN65	V8BFW25-065	NOM25A065P
DN80	V8BFW25-080	NOM25A080P
DN100	V8BFW25-100	NOM25A100P
DN125	V8BFW25-125	NOM25A125P
DN150	V8BFW25-150	NOM25A150P
DN200	V8BFW25-200	NOM25A200P
DN250	V8BFW25-250	NOM25A250P
DN300	V8BFW25-300	NOM25A300P
DN350	V8BFW25-350	NOM25A350P
DN400	V8BFW25-400	NOM25A400P
DN450	V8BFW25-450	NOM25A450P
DN500	V8BFW25-500	NOM25A500P
DN600	V8BFW25-600	NOM25A600P

■ 接线图 Wiring Diagram

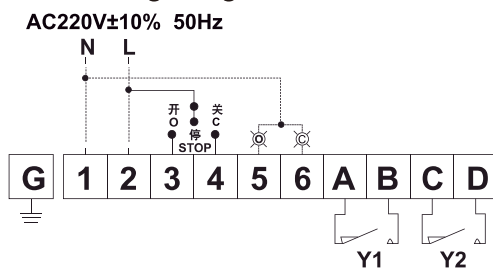

开关型 On-Off Type

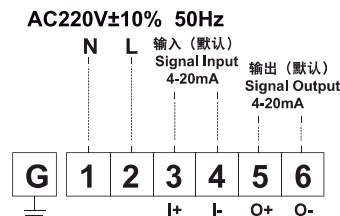

调节型 Modulating Type


注Note:

Y1/Y2: NOM25A050..100 (P), 10.1A@125/250VAC(阻性负载resistive load), 2A@125/250VAC(感性负载Inductive load);


NOM25A125..600(P), 16.1A@125/250VAC(阻性负载resistive load), 4A@125/250VAC(感性负载Inductive load);

线缆要求Requirement for cable: NOM25A050..100 (P), 6-12mm;
NOM25A125..600 (P), 10-14mm;

调节型执行器信号切换 Modulating Type Switch Over for Signal

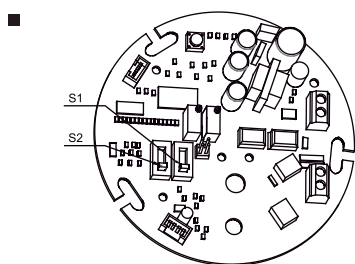

NOM25A050..100(P)

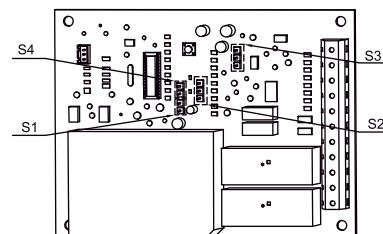

NOM25A125..600(P)

信号 Signal		输入/Input		输出/Output	
		S1	S2	S1	S2
0-10V	JP6				
2-10V					
4-20mA					
1-5V	JP6				---

默认
Default

信号 Signal	输入/Input		输出/Output	
	S1	S2	S3	S4
0-10V				
2-10V				
4-20mA				
1-5V			—	—

默认
Default

Honeywell