

## 溫度傳訊器使用說明書 Temperature Sensor (NTC20k/Pt1000 Output) Manual

感謝您購買本公司的產品！為使產品能正常運作，請您詳閱使用手冊，並請依照說明操作。謝謝！

Thanks for choosing our product ! Please read carefully and follow this instruction before using!

<http://www.bjhoneywell.com>

### 產品附件清單 Product accessories list

#### 1. 產品：壁掛式 Wall mount

附件：如下

傳訊器	數量：1
螺絲	數量：4
使用說明書	數量：1
產品中有害物質的名稱及含量	數量：1

#### 2. 產品：水管式 Immersion / Outside Air mount

附件：如下

傳訊器	數量：1
防水電纜固定頭	數量：1
使用說明書	數量：1
產品中有害物質的名稱及含量	數量：1

#### 3. 產品：風管式 Duct mount

附件：如下

傳訊器	數量：1
法蘭	數量：1
防水電纜固定頭	數量：1
螺絲	數量：4
使用說明書	數量：1
產品中有害物質的名稱及含量	數量：1

### 安裝方式 Installations

#### 1. 請選定安裝傳訊器的位

Please decide right position for installation.

#### 2. 將底座以螺絲固定在欲安裝的牆面或裝線盒上

Fix the base with screws on the wall

①請依接線圖連接訊號線(電阻輸出,請參考接線圖一)

Please refer Figure 1 (Resistance output).

②將PC板(面朝上),插入接線端子台,並將PC板嵌入正確位置

Connect properly the PC board to the terminal ( on top )

#### 3. 安裝線材請採用隔離線(15AWG / 17AWG / 22AWG)


Please apply 15AWG / 17AWG / 22AWG cable for installation.

**\*注意：接線前後，請勿接上電源，以免造成機板損壞，或發生危險**



**Notice: Please remove power from unit before wiring input and output connection, in order to avoid any damage or hazard..**

接線方式如下：Please refer to the wiring Figures as following：

### 端子接線方式 Wiring figure

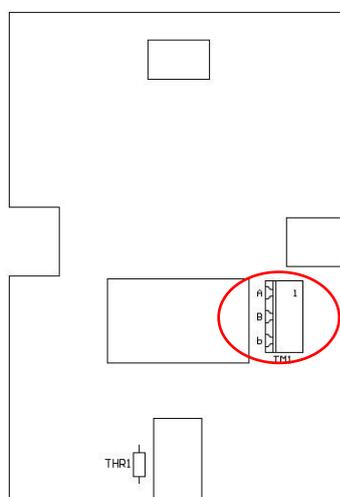

圖一  
Figure 1

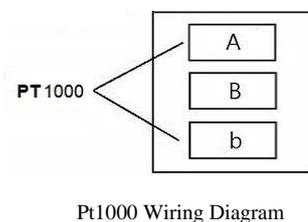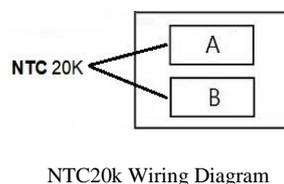

\*\* NTC 20K 2-wire 式 sensor 直接連接 "A, B" 端子輸出；若 Pt1000 3-wire 式 sensor 直接連接 "A, B, b" 端子即可。

NTC 20K 2-wire type directly connected to the "A, B" terminal output; if Pt1000 3-wire directly connected "A, B, b" terminal output.